 




LUIGI FRANCHI s.p.A.
BRESCIA - ITALY

FOE
Ask the man who owns one.
4541 N.W. 133rd STREET
OPA LOCKA, FL 33054

SHOTGUN WARNINGS

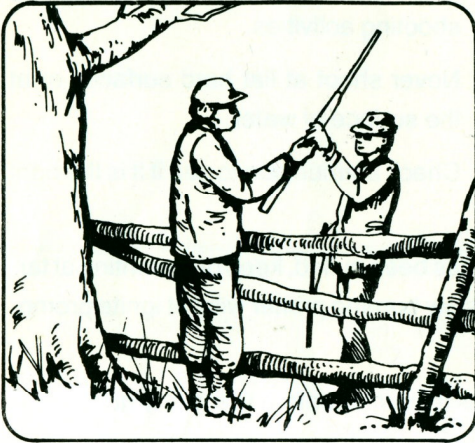

Never climb a tree, or fence, or wall while carrying a loaded gun.

Never let a gun rest against a tree of fence or wall. If you are going to leave a gun, make sure it is unloaded and lying flat or secured in a proper rack or holding device.

Don't "horseplay" with a shotgun. Your gun can't think --- but you can. Firearms safety depends on you...

Never point a gun at any person or any object that you don't intend to shoot.

Always empty guns before carrying into house, car, truck, R.V., boat, etc. Be sure of your backstop and what lies beyond before you shoot.

Never accept a gun without opening it to check for yourself whether or not it is loaded.


Always load guns with muzzle pointing at the ground.

Always unload guns with muzzle pointing at the ground.

Reloaded cartridges can be dangerous to you and to your gun.

Never leave a gun unattended.



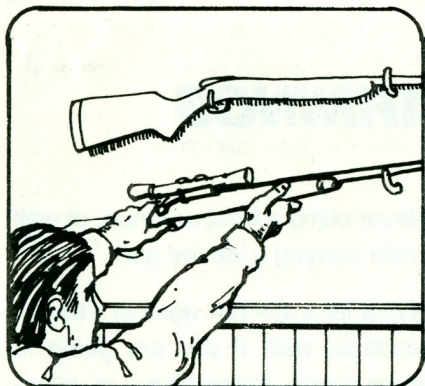

Store guns and ammunition separately and **BEYOND THE REACH OF CHILDREN**.

Never take alcohol, drugs or medications immediately before or during shooting activities.

Never shoot at flat hard surfaces or at the surface of water.

Check ammunition to see if it is the right

size. Old ammunition is not safe to use.

Should a gun fail to discharge after trigger has been pulled, keep gun pointing at target for at least 30 seconds. Sometimes a slow burning primer will not ignite promptly and properly and cause a "hang fire".

Get instructions from a competent firearms instructor before using any gun.

Write to us concerning any items or circumstances which you don't understand and which might relate to your safety and the operation of any of our products.

Wear fluorescent orange, vest, hat, jacket when in the woods or fields.

Spectators should always be at least 10 feet in back of and not in line with the breech of any gun when you are shooting.

Never put your hand over the muzzle of a gun.

Alterations of trigger pull will usually alter sear engagement and can cause accidental discharge.


Never take a gun out of a car, boat or R.V. by pulling it toward you by the muzzle.

Never leave a gun where it could fall and accidentally discharge.

Never pull the trigger unless shooting at a target or unless you have checked to make sure whether the gun was unloaded.

Never assume that a gun is unloaded.

Never have a loaded gun in a house, car, boat, R.V., truck, etc.

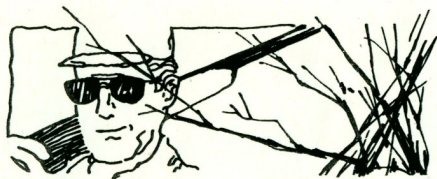

Always wear protective shooting glasses when shooting on the range or in a field or forest or boat.

On side by side and over/unders, the safety selector switch locks the trigger

only. Dropped guns, under certain conditions, can discharge.

A moisture swollen stock can internal parts from working freely. Keep shotguns dry.

Freezing weather can cause wooden parts of shotguns to be more brittle and prone to crack.

Don't use hot loads or Magnum loads. Use only standard loads from reputable manufacturers.

Alterations or modifications of any sort, should only be done by factory personnel or qualified gunsmiths.

Always load your gun only when on the range or in the field and ready to shoot. When you stop shooting, unload before leaving the field or range.

Always keep your finger off the trigger until you are ready to shoot.

Never rely on a gun's "safety" to compensate for unsafe gun handling. A safety is only a mechanical device, it's not a substitute for good common sense.

Carry only proper gauge and length cartridges for shotgun that you are using. Mixed gauges in pouches or boxes are apt to cause confusion and accidents.

Inspect barrels before discharging gun. Any obstruction or grease or residue or wad remnants can blow the barrel apart.

Never let water or snow or mud enter barrel. If water or snow or mud gets into barrel, remove cartridges and clean bore immediately before attempting to shoot.


Never leave a loaded shotgun lying on the ground or propped against a rock or tree or car or any object. If a shotgun falls, it can discharge even with safety engaged.





LUIGI FRANCHI S.p.A.
BRESCIA - ITALY

*Distributed
in U.S.A. by*

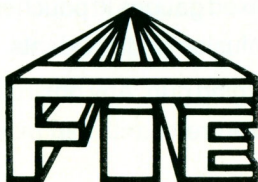

Ask the man who owns one ...

F.I.E. CORPORATION

MAILING ADDRESS: P.O. Box 4866, Hialeah, Fl. 33014

 
FACTORY ADDRESS: 4541 N.W. 133rd St., Opa Locka, Fl. 33054

**The next section is the full manual
to be printed double-sided on
8.5" x 11" sheets, stapled down the
middle and folded.**

This will be as the original manual was made.

**The previous pages for on-screen viewing
were 300 DPI.**

These images for printing are 600 DPI.

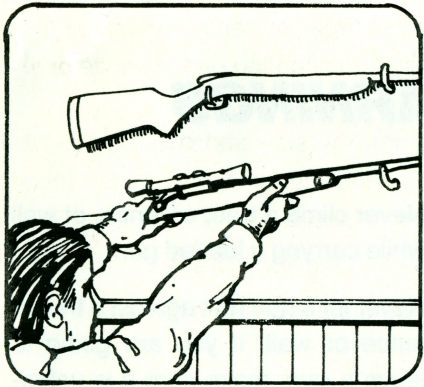

size. Old ammunition is not safe to use.

Should a gun fail to discharge after trigger has been pulled, keep gun pointing at target for at least 30 seconds. Sometimes a slow burning primer will not ignite promptly and properly and cause a "hang fire".

Get instructions from a competent firearms instructor before using any gun.

Write to us concerning any items or circumstances which you don't understand and which might relate to your safety and the operation of any of our products.

Wear fluorescent orange, vest, hat, jacket when in the woods or fields.

Spectators should always be at least 10 feet in back of and not in line with the breech of any gun when you are shooting.

Never put your hand over the muzzle of a gun.

Alterations of trigger pull will usually alter sear engagement and can cause accidental discharge.

Never take a gun out of a car, boat or R.V. by pulling it toward you by the muzzle.

Never leave a gun where it could fall and accidentally discharge.

Never pull the trigger unless shooting at a target or unless you have checked to make sure whether the gun was unloaded.

Never assume that a gun is unloaded.

 
Never have a loaded gun in a house, car, boat, R.V., truck, etc.

Store guns and ammunition separately and **BEYOND THE REACH OF CHILDREN**.

Never take alcohol, drugs or medications immediately before or during shooting activities.

Never shoot at flat hard surfaces or at the surface of water.

Check ammunition to see if it is the right

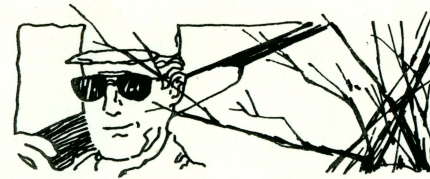

Always wear protective shooting glasses when shooting on the range or in a field or forest or boat.

On side by side and over/unders, the safety selector switch locks the trigger

only. Dropped guns, under certain conditions, can discharge.

A moisture swollen stock can internal parts from working freely. Keep shotguns dry. Freezing weather can cause wooden parts of shotguns to be more brittle and prone to crack.

Don't use hot loads or Magnum loads. Use only standard loads from reputable manufacturers.

Alterations or modifications of any sort, should only be done by factory personnel or qualified gunsmiths.

Always load your gun only when on the range or in the field and ready to shoot. When you stop shooting, unload before leaving the field or range.

Always keep your finger off the trigger until you are ready to shoot.

Never rely on a gun's "safety" to compensate for unsafe gun handling. A safety is only a mechanical device, it's not a substitute for good common sense.

Carry only proper gauge and length cartridges for shotgun that you are using. Mixed gauges in pouches or boxes are apt to cause confusion and accidents.

Inspect barrels before discharging gun. Any obstruction or grease or residue or wad remnants can blow the barrel apart.

Never let water or snow or mud enter barrel. If water or snow or mud gets into barrel, remove cartridges and clean bore immediately before attempting to shoot.

Never leave a loaded shotgun lying on the ground or propped against a rock or tree or car or any object. If a shotgun falls, it can discharge even with safety engaged.





LUIGI FRANCHI S.p.A.
BRESCIA - ITALY

*Distributed
in U.S.A. by*



F.I.E. CORPORATION

MAILING ADDRESS: P.O. Box 4866, Hialeah, FL 33014

 
FACTORY ADDRESS: 4541 N.W. 133rd St., Opa Locka, FL 33054



LUIGI FRANCHI S.p.A.
BRESCIA - ITALY

FIE
Ask the man who owns one ...
4541 N.W. 133rd STREET
OPA LOCKA, FL 33054

SHOTGUN WARNINGS

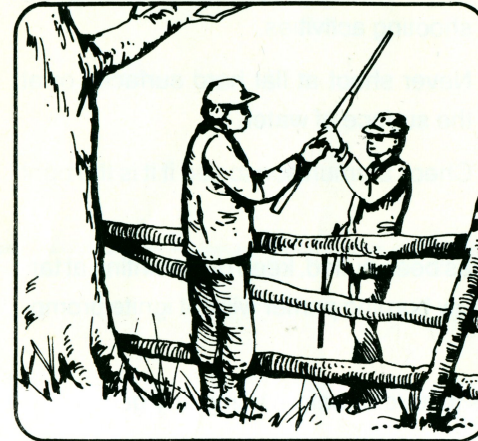

Never climb a tree, or fence, or wall while carrying a loaded gun.

Never let a gun rest against a tree of fence or wall. If you are going to leave a gun, make sure it is unloaded and lying flat or secured in a proper rack or holding device.

Don't "horseplay" with a shotgun. Your gun can't think --- but you can. Firearms safety depends on you...

Never point a gun at any person or any object that you don't intend to shoot.

Always empty guns before carrying into house, car, truck, R.V., boat, etc. Be sure of your backstop and what lies beyond before you shoot.

Never accept a gun without opening it to check for yourself whether or not it is loaded.

Always load guns with muzzle pointing at the ground.

Always unload guns with muzzle pointing at the ground.

Reloaded cartridges can be dangerous to you and to your gun.

Never leave a gun unattended.

